

SAFETY INSTRUCTION

13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as a power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. Do not expose the apparatus to dripping or splashing liquids and do not place objects filled with liquids (such as a beverage container or a vase) on the apparatus.
15. Warning: To reduce the risk of fire or electric shock, do not expose this apparatus to moisture.
16. The apparatus should be connected to mains outlet with a protective earthing connection.



Disconnect device is Mains Plug, which should remain readily operable.

WARNING:

Amplifier fails to function, please contact your contact your local distributor. Under no circumstances remove the back panel of the amplifier while it is Connected to main supply.

IMPORTANT PARAMETER

OUTPUT POWER:	45W (RMS) – Use AC adapter 28W (RMS) – Use built-in lithium battery
LOUDSPEAKER:	Woofer 6.5 inches, 4 ohms; Tweeter 3 inches
DIMENSIONS:	330(W) x 260(H) x 200(D) mm
POWER SUPPLY:	DC DC 12.0V - AC adapter or lithium battery
BATTERY DURATION:	about 5 hours (depending on actual use)
POWER CONSUMPTION:	70 W

18650 Lithium battery power supply:

This device has a built-in lithium battery. Operation will continue even if the power supply is unexpectedly disconnected.

- After the AC adapter is connected to the power cable and power socket, the internal lithium battery is charged.
- Turn on the [POWER] switch, the speaker is on, and the power indicator is bright blue.
- Under the working state of the speaker, when the lithium battery is low, the power indicator will turn red. At this time, the AC adapter should be connected to charge, so as not to damage the battery.
- Battery damage When replacing the battery, turn off the power and disconnect the device connected to it. To avoid speaker failure or damage to other equipment.
- Do not use metal objects to touch the battery cover. Otherwise, the battery will be short-circuiting and burning due to high temperature.

Attention: Please use the attached AC adapter.

DISTRIBUTION CZECH REPUBLIC

Praha Music Center spol. s r.o.
Ocelářská 937/39
190 00 Praha 9
Green line (free calls)
tel.: 800 876 066

tel.: + 420 226 011 111
email: info@pmc.cz
<http://www.pmc.cz>

WARRANTY AND AFTER-SALES SERVICE

Praha Music Center spol. s r.o.
Rakovnická 2665
440 01 Louny
Tel.: +420 226 011 197
Email.: servis@pmc.cz

ENG


Henry's

**ACOUSTIC
GUITAR
AMPLIFIER**


INSTRUCTION MANUAL

ACA-45W
WALKER
Acoustic

CONTROL PANEL INTRODUCTION

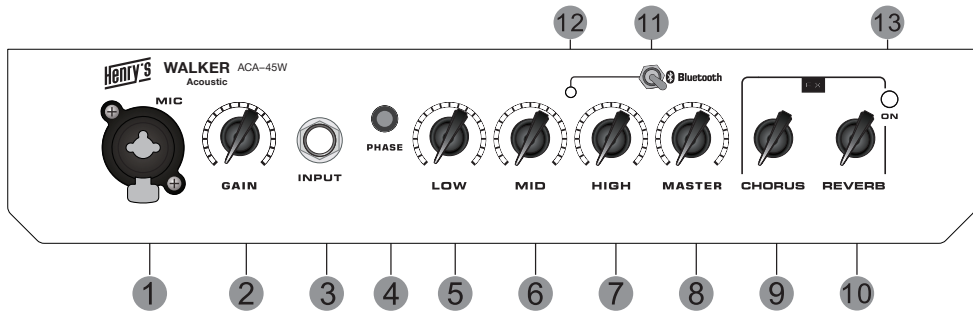

1. **MIC INPUT:** Microphone input
2. **GAIN:** Regulating gain
3. **INPUT:** For external instrument equipment
4. **PHASE:** Sound output optimization by adjusting phase alignment
5. **LOW:** Bass frequency level control
6. **MID:** Middle frequency level control
7. **HIGH:** Treble frequency level control
8. **MASTER:** Master volume control
9. **CHORUS:** Regulate the chorus function
10. **REVERB:** Adjust the reverberation function
11. **Bluetooth:** Bluetooth switch
12. **Bluetooth indicator:** (when Bluetooth is successfully connected, the green Bluetooth indicator will be on.)
13. **Power indicator:** The blue light is displayed when the power is turned on, and the red light is displayed when the power is low
14. **POWER:** On/Off switch
15. **AC INPUT:** DC connector for adapter
16. 17. **CHARGING:** Charging light. When the 16 light is on, the device is fully charged. When the 17 light is on, it indicates that the device is being charged
18. **LINEOUT:** Non-balance & Balance
19. **AUX/REC:** Allows you to record to an external device
20. **MIC/VOL:** Control the volume of microphone individually
21. **REVERB:** Adjust microphone reverberation

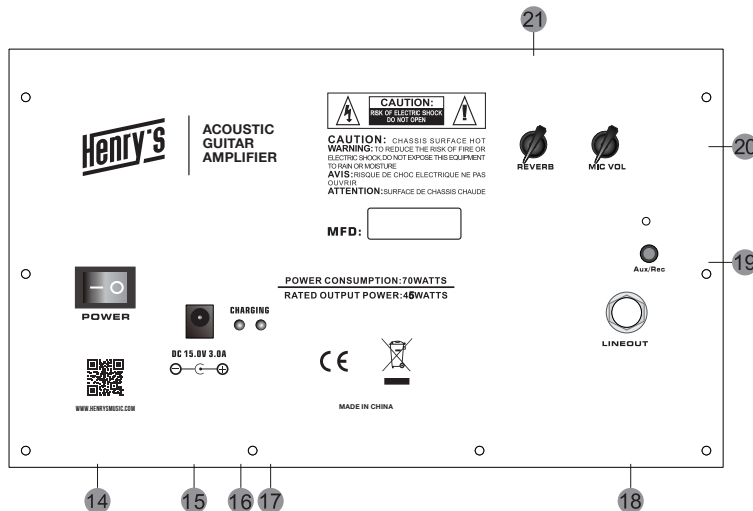

SAFETY INSTRUCTION



Whenever this symbol appears, it alerts you to the presence of important operating and maintenance (servicing) instructions in the user's manual for this amplifier.



Wherever this symbol appears, it alerts you to the presence of uninsulated dangerous voltage inside the enclosure that may be sufficient to constitute a risk of shock.

SAFETY INSTRUCTION



1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block the ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched, particularly at the plugs, convenience receptacles and the point where they exit from the apparatus.
11. Use only attachments/accessories specified by the manufacturer.
12. Unplug this apparatus during lightning storms or when unused for long periods of time.